

Cotton Candy Machine





20 Rawling Place, Suite #123, Fredericksburg, VA 22405 - (540) 699-2936

COTTON CANDY SAFETY RULES AND INSTRUCTION

COTTON CANDY MACHINE SAFETY PRECAUTIONS

- **NEVER** make alterations to the equipment. Any alterations to this equipment may cause a dangerous situation.
- **DANGER:** machine must be properly grounded to prevent electrical shock to personnel.
- **DO NOT** immerse the equipment in water.
- **ALWAYS** unplug the equipment before cleaning or servicing.

ELECTRICAL REQUIREMENTS

- The EconoFloss floss machine requires a 15 amp, 120volt, 60 cycle standard wall receptacle.
- The power supply cord is equipped with a machine ground (the tubular prong on the male plug). For safety, always plug the machine into a ground receptacle, which has been tested for proper polarity to insure electrical safety.

BEFORE PLUGGING IN THE MACHINE

- **Turn two outside brackets to the vertical position so the bell housing “floats” freely on the springs. Unscrew and push down the two knobs on each side of the cabinet top to lower the shipping bracket completely.**

CONTROLS AND FUNCTIONS

- **MAIN SWITCH** – Turn motor “on” or “off” and supplies current to the heat switch
- **HEAT SWITCH** – Turns current to the heating element (ribbon) “on” or “off”
- **HEAT CONTROL** – Increases or decreases voltage to ribbon wire heating element using a graduated dial.

OPERATING INSTRUCTIONS

- The heat and master switch should be in the off position
- Pour floss sugar into the spinner head. Always fill it 90% full with sugar. This maintains a balanced condition in the floss head. **DO NOT OVERFILL**
- Turn on master switch and wait 10 seconds before turning on the heat switch
- The machine should start making floss in about 20-45 seconds. Turn the Heat Control counter-clockwise to eliminate smoking.
- Once the ideal heat control setting is found, operate with the setting near this position each time

NOTE: Floss sugar comes in sealed, plastic-coated cartons with handy pouring spouts for filling. Do not use any other sugar in the machine: you could burn the ribbons and damage the machine.

WARNING: Keep foreign objects out of the head. Floss head rotates at 3450 PRM. Operator must keep hand and face clear of floss head and keep spectators at a reasonable distance.