

# Popcorn Machine





**20 Rawling Place, Suite #123, Fredericksburg, VA 22405 - (540) 699-2936**

### **POPCORN SAFETY RULES AND INSTRUCTION**

#### **POPCORN MACHINE SAFETY PRECAUTIONS**

- **DO NOT** touch the kettle while it is hot to avoid serious burns.
- **NEVER** make alterations to the equipment. Any alterations to this equipment may cause a dangerous situation.
- **MAKE** sure all machines switches are in the OFF position before plugging the equipment into the receptacle.
- **DANGER:** machine must be properly grounded to prevent electricity shock to personnel.
- **DO NOT** immerse the kettle, warmer, or any other part of this equipment in water.
- **ALWAYS** unplug the equipment before cleaning or servicing.

#### **ELECTRICAL REQUIREMENTS**

- Standard voltage for all models is 120 Volt, 60 Hz, single phase AC.

#### **CONTROLS AND FUNCTIONS**

- **LIGHT AND WARMER SWITCH** – Turn on heat to bottom corn pan and light.
- **KETTLE MOTOR SWITCH** – Turns on motor which drives kettle agitator shaft
- **KETTLE HEAT SWITCH** – Turns on heat element.

#### **OPERATING INSTRUCTIONS**

- Turn kettle heat and kettle motor switch "ON"
- For **First** batch only, let kettle heat about 4 minutes.
- Load pre-measured popcorn and oil pouch into kettle.
- When corn is 99% popping, dump kettle.
- Repeat cycle #3 and #4. Always pop at least 5 batches each time you pop.
- On **Final** batch only, turn the kettle switch off as soon as corn starts popping rapidly.

**WARNING:** Keep kettle switch OFF when not popping.